


PROP ROD IN STORED POSITION

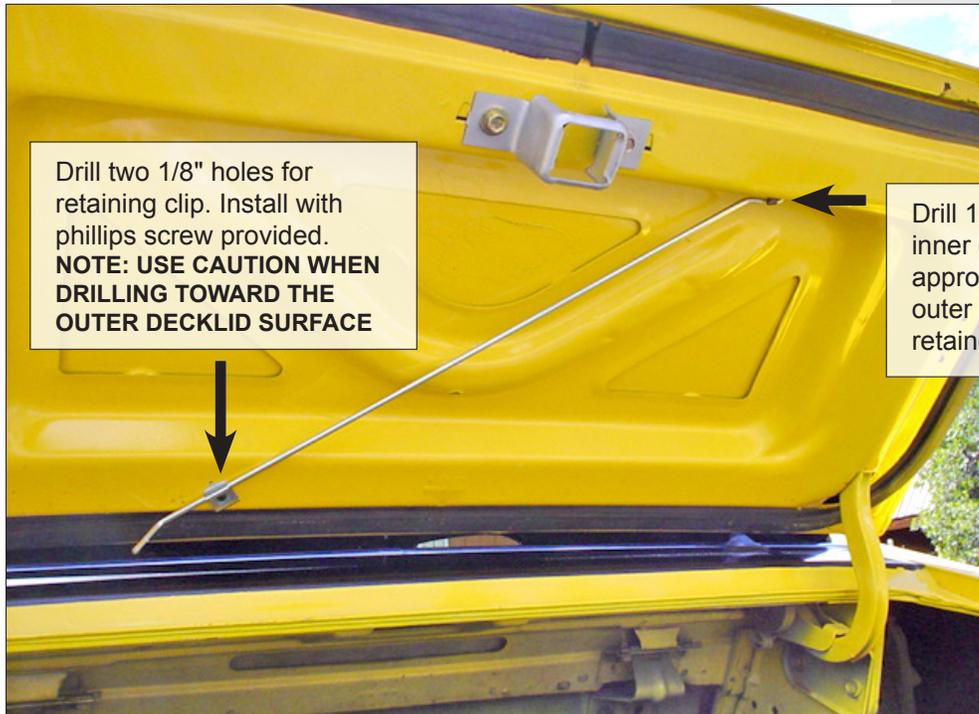

Drill two 1/8" holes for retaining clip. Install with phillips screw provided. **NOTE: USE CAUTION WHEN DRILLING TOWARD THE OUTER DECKLID SURFACE**

Drill 1/4" hole in vertical inner deck lid stamping, approximately 12" from RH outer deck lid edge. Insert rod retainer clip and rod shown.

PROP ROD IN OPEN POSITION



Drill 9/32" hole in RH fender extension as shown (approximately 2.5" down from peak)

2.5"

To place an order, or for current pricing, call your authorized Scott Drake dealer.

For a list of dealers in your area, or for any other questions about Scott Drake products, visit www.scottdrake.com or call our customer service department toll free:

1.800.999.0289

Mon - Thurs 7:00 a.m. to 5:00 p.m.
Friday 7:00 a.m. to 4:30 p.m. - PST



130 Cassia Way
Henderson, NV 89014
t: 702.853.2060
f: 702.853.2062

C9ZZ-6344206_INST